GB **AMW 538**

QUICK REFERENCE GUIDE

CONTROL PANEL

Selection window
Displays the selected function.

Multifunction knob
Turn to select a desired function:
Timer
Microwaves
Grill
Grill Combi
Crisp
Auto functions

Auto button
Press to select one of the auto functions:
Jet defrost
6th Sense Reheat
6th Sense Crisp
6th Sense Steam

Digital display
The display includes a 24-hour clock and indicator symbols.

Selector Indicator lights
These indicate which selection you are currently working with.

Select button
Press to select setting:
Weight
Time
Microwave power level

+/- knob
Turn to set value of:
Time
Weight
Doneness

Stop button.
Press shortly to stop or reset any of the oven functions.

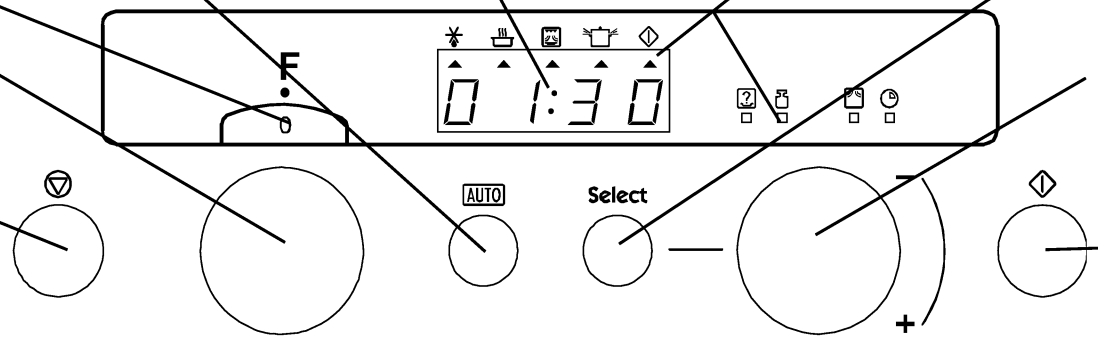

Jet Start button.
Use to start the cooking process or invoke the Jet Start function.

CHOOSING MICROWAVE POWER

MICROWAVES ONLY

Level	To be used for:
JET / 900 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
750 W	Cooking of vegetables, fish, meat etc.
650 W	Cooking dishes, not possible to stir.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews and melting butter.
160 W	Defrosting.
90 W	Softening butter, cheese and ice cream.
0 W	Setting the standing time.

GRILL COMBI

Level	To be used for:
90 - 160 W	Fish & Fruit
160 - 350 W	Vegetables & Gratin

MANUAL DEFROSTING

This function is used for defrosting food not included in the Jet Defrost function.
Follow the procedure for “How to cook and reheat with microwaves” and choose 160 W when defrosting manually.

KITCHEN TIMER

Use this function when you need a kitchen timer to measure exact time for various purposes such as cooking eggs, pasta or letting the dough rise before baking etc.
1. Turn the multifunction knob to the zero position.
2. Turn the +/- knob to set the time to measure.

The timer automatically starts the countdown after 1 second.

JET START FUNCTION

This function is used for quick reheating of food with a high water content such as; clear soups, coffee or tea.
Press to automatically start with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with ½ min. You may also alter the time by turning the Adjust knob to increase or decrease the time.
This button also works as a normal start button after setting a function.

NOTE: Never operate the oven empty when using microwaves

GB **AMW 538**

QUICK REFERENCE GUIDE

AUTO *QUICK GUIDE TO AUTO FUNCTIONS*

1. **Turn** the multifunction knob to the Auto position.
2. **Press** the Auto button to select the desired auto function.
3. **Turn** the +/- knob to choose desired food class.
4. **Press** the Select button (default weight is displayed).
5. **Turn** the +/- knob to set the weight of the food.
6. **Press** the Start button.

Midway thru the process, the oven may STOP and prompt you to "TURN or STIR FOOD":
— Don't use the stop button!
— Just open the door and turn the food.
— Close, and restart with the Jet Start button.

Automatic but less perfect results:
If you do not turn the food when the oven prompts you to do so, the oven will AUTOMATICALLY RESTART after 2 minutes. The oven then completes the process. The time will be longer in this case and the result will be less perfect, than it would have been if you had turned the food when prompted to do so.

AUTO JET DEFROST

Use this function for defrosting ONLY.
Jet Defrost can only be used for very fast defrosting of frozen food belonging to the categories listed here. Use manual defrost for other food or weights not listed.

PLEASE NOTICE
To achieve perfect results it is NECESSARY to:
— Input, with the max. possible precision, the WEIGHT of the food selected.
— Turn the food when the oven prompts you to do so.



1 MEAT (100 g - 2 Kg) | 2 POULTRY (100 g - 3 Kg) | 3 FISH (100 g - 2 Kg) | 4 VEGETABLES (100 g - 2 Kg) | 5 BREAD (100 g - 2 Kg)

AUTO 6th SENSE CRISP

Use this function to quickly reheat your food from frozen to serving temperature.

1 FRENCH-FRIES (250 g - 600 g) | 2 PIZZA, thin crust (250 g - 500 g) | 3 PAN PIZZA (300 g - 800 g) | 4 CHICKEN WINGS (250 g - 600 g) | 5 FISH FINGERS (200 g - 600 g)

NOTE: Never operate the oven empty when using microwaves

AUTO 6th SENSE REHEAT

Use this function when reheating readymade food either frozen, chilled or room tempered.

The net weight shall be kept within **250 - 600 g** when using this function.

AUTO 6th SENSE STEAM

Use this function for such food as vegetables, fish, rice and pasta.

Always cover the food with a lid. Ensure that the vessel and lid are microwave proof before using them. If you don't have a lid available to your chosen vessel, you may use a plate instead. It should be placed with the underside facing the inside of the vessel.

Do not use plastic or aluminum wrappings when covering the food.

GRILL

Use this function when cooking:
- Cheese toast & Hot sandwich
- Sausages
- Grill spit
- Pommes Duchess
- Gratinated fruit

GRILL COMBI

Use this function when cooking:
- Potato gratin
- Fish gratin
- Chicken pieces
- Lasagne
- Stuffed vegetables

CRISP

Use this function to reheat and cook pizzas and other dough based food. It is also good for frying bacon and eggs, sausages, hamburgers etc.

***Use oven mittens** or **the special Crisp handle** supplied when removing the hot Crisp-plate.*



TECHNICAL SPECIFICATION

Supply voltage	230 V/50 Hz
Rated Power Input	2800 W
Fuse	16 A (UK 13 A)
MW output power	900 W
Grill	1600 W
	H x W x D
Outer dimensions:	455 x 595 x 510
Oven compartment:	210 x 450 x 420

4619 694 53811